



Modular L-Bracket

Manufactured in the USA



Thank you for purchasing the ProMediaGear L-Bracket. The L-Bracket was designed to quickly mount your camera onto a Arca-Swiss style ball head in landscape or portrait shooting positions. This instruction sheet is generic for all L-Brackets, some options may not be available in your specific L-Bracket.

Instructions


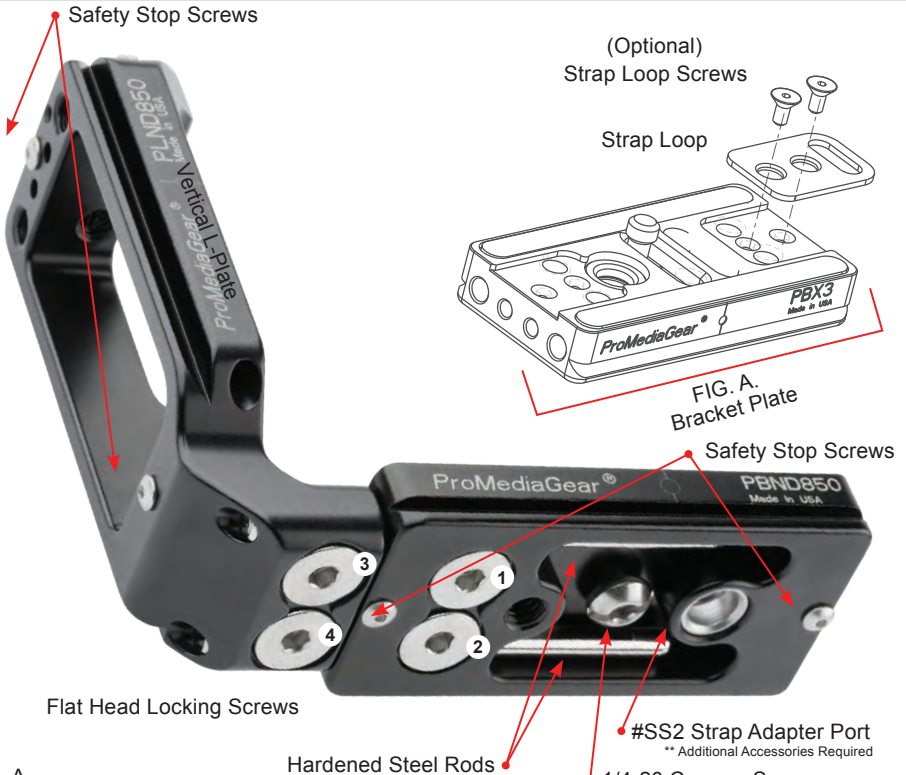


FIG. A.

1. (Optional) Attach the Strap Loop onto the Bracket plate using the small Allen wrench and screws provided. The loop will sit partially recessed into the cutout on the bottom of the Bracket Plate. The strap loop should be curved downward away from the camera body.
2. Next, install the Custom Bracket Plate onto your camera or grip using the supplied 1/4-20 Camera screw and 5/32 Allen Key.
3. You are now ready to install the captive rods into the Vertical L-Plate. First, Insert the Rod into the Vertical L-plate, (3) with the flat part facing in, see rod diagram for more information. Then, insert the Flat Head Locking Screw and tighten down. Repeat for the other side, (4). Note: *The Rod must have the flat facing inward to attach properly.* Once completed on the L-plate, slide the rods into the bottom of the Bracket Plate. **NOTE: The Rods will NOT go in if the screws are already started.** Slide the Rods into the Bracket Plate until you see the flat part facing inward, then insert the screws.
** If the Rods feel really tight once installed and not allowing the unit to move back/forth, loosen either screw 3 or 4, reinsert, then retighten.
4. The L-Bracket may be locked down in any position as long as the rods are being secured by the screws (1 and 2) mounted underneath on the Bracket Plate. Securely connect the L-Bracket to the Bracket Plate by tightening the flat head screw #1 first using a 5/32 Allen key, then tighten the second, screw 2.

Rod Installation

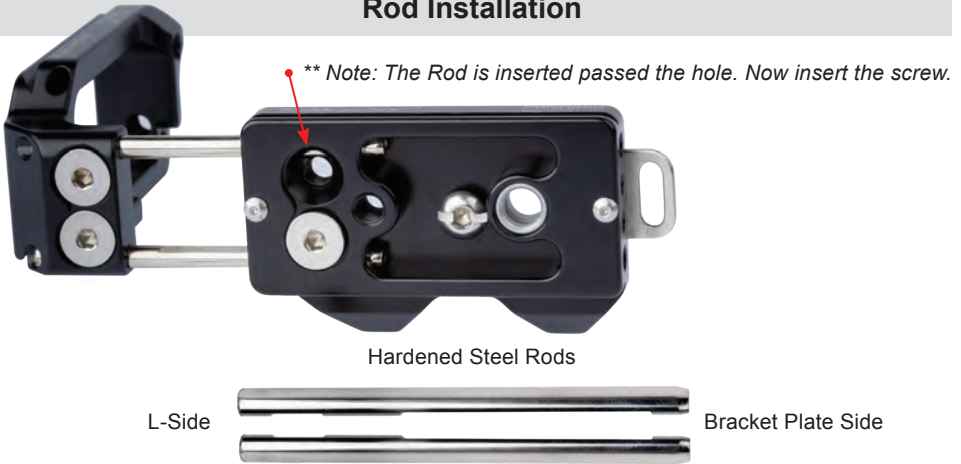

**** Note: Retaining Screw MUST be removed before inserting the Rods.**

**** Note: Flats must be facing inward.**

Features

- Modular, Arca Compatible Multi-piece design
- CNC Machined from T6061 Aluminum
- Anodized scratch resistant finish
- Hardened steel, captive adjustable rods *(patent pending)*
- Safety stops on both Vertical and Horizontal Plates
- Made in the USA

Maintenance/Operation

Check periodically for loose screws and tighten with the hardware that is included with the L-Bracket. Before using the bracket make sure it's attached to your camera correctly and the vertical component is tightened securely.

Replacement Products



Flat-Head Locking Screws



**#PASL1
Strap Loop**

Customer Service

If you have any questions please call us at 1-708-263-4443 or
Toll Free 1-888-413-3332 or email info@ProMediaGear.com
www.ProMediaGear.com

Additional ProMediaGear Items



#BH1
Studio Ball Head



#HM1
Monopod Tilt Head



#SS2
Quick Release Strap System



#BBX
Boomerang Flash Bracket



#HB70
Handle for Bracket Plates



#CS2
Low Profile Cold Shoe



#PM501
Manfrotto Style Plate w/ Arca Clamp



#PXM1
Manfrotto RC2 to Arca Hybrid Plate



#C60
Arca Type Clamp



#VRNR4
NATO Rail w/ Cold Shoe



#VRH21
Dual Handle Video Rig w/ PBX3



#PMG-DUO SLIDER(S)
VS24 / VS32 / VS36 / VS368 / VS48

ProMediaGear®

16555 108th Ave., Orland Park, IL 60467

1-708-263-4443 Toll Free: 1-888-413-3332 www.ProMediaGear.com

Rev 04/18