


## **#SS2P3**, How to Assemble

Retrofit your current strap with ease!

To install, simply lay the mechanism over your strap webbing (less than 1 inch wide) and push the long pin through the hole and across to the other side. Open the loctite and place a small drop inside the threaded area. Insert the supplied screw and tighten. The screw will pull the pin snuggly into the other side of the strap. As an added measure of safety we manufactured the #SS2P3 with (2) small safety set screws. Insert a drop of loctite into each hole and carefully install the small screws. That's it!! The #SS2P3 is compatible with the PMG Quick Release Strap System. (\*\*Compatible Bracket Plate Required)

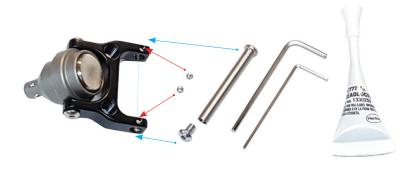

\*\* Apply a small drop of loctite to the rod screw as well as the 2 small set screws. Tighten until snug. Do NOT over tighten.

## What's in the Box

- (1) Main QR Body
  1) Rod with Mounting Screw
  (2) Safety Set Screws
  (2) Allen Keys
  (1) Loctite
- 5-year warranty

  How to Operate

To Install: Hold your camera firmly in 1 hand and rotate the camera so that the compatible mounted bracket plate is facing you. Next, push the spring loaded button on the #SS2P3 and insert the male portion of the adapter into the compatible receiver on the Bracket Plate. Release the button once the mechanism is fully inserted and confirm the pins are set into the plate correctly by giving your strap a tug. The unit will allow your camera to spin 360° and will not come out until you depress the button again.

To Remove: Holding your camera securely push the button on the #SS2P3 Quick Release Adapter and push down toward your camera to release the interior locking components, then lift out. The entire quick release adapter removes cleanly from the compatible bracket plate.

For additional information: http://bit.ly/SS2P3Adapter

Assembly Video: http://bit.ly/SS2P3VID